


# Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
  - a) The battery level icon displays  (An empty battery)
  - b) The device powers off automatically when restarted.
  - c) There is no response when pressing keys with keys unlocked and battery full.
- When the device is being formatted or transferring a file, do not interrupt the connection. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor is disconnected from the device, the device will remain operable as long as the battery has sufficient charge.

- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
- Do not leave the device on in a confined space such as a book case or similar. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No open flames, such as lighted candles, should be placed on the device.
- Use the device in moderate climates.
- Never disconnect the USB cable from your device to the PC during a data transfer or formatting. Correctly disconnect the device from the operating system. Information loss and malfunctions can occur.



#### Disposal

Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.

The rechargeable battery in this device may not be replaced by the user. Please contact our service support center should the battery require replacing.

# Listening Cautions



## Hearing Safety

Listen at a moderate volume: Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss. Sound can be deceiving, over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there. To establish a safe volume level: Set your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, without distortion. Listen for reasonable periods of time: prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. Be sure to use your equipment reasonably and take appropriate breaks. Be sure to observe the following guidelines when using your headphones. Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts. Do not turn up the volume so high that you can't hear what's around you. You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

EN

## SUPPORT

<http://www.odys.de>

[support@odys.de](mailto:support@odys.de)

On our website you will find the latest information about this product, other products of our enterprise, our company itself and valid warranty terms. The latter you will find under Service - Downloads. Firmware upgrades for this device are also offered on our website. For questions or problems read our FAQs on our website or contact our after sales service.

# Appropriate use

Device is designed for playing music and video files in commonly used formats, showing photos and access internet functions using the build in wifi function. It is exclusively meant for this purpose and must only be used for the same.

This also includes paying attention to all information contained in this operating manual, especially in the safety instructions. Any other usage is considered to be improper and may lead to material damages and even personal injuries. Moreover, it will result in the immediate loss of guarantee. The manufacturer does not bear any liability for damages caused due to improper use.

**This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.**

# Table of Content

EN

Safety Precautions .....	1
Listening Cautions .....	3
Appropriate use .....	3
Feature Summary.....	5
Accessories .....	5
Buttons & Ports.....	6
Charging Battery.....	7
Installing Memory Card.....	7
Transferring Files.....	8
Turning On/Off.....	8
Screen Lock.....	8
Home Screen.....	9
Using the Touch Screen .....	11
Access Internet.....	12
Reading E-Books .....	16
Playing Music .....	21
Playing Video.....	23
Viewing Photos.....	25
File Explorer .....	27
E-mail .....	29
Manage Third-party Applications .....	31
System Settings.....	32
Troubleshooting .....	34
Specifications .....	36
Warranty Conditions .....	38

# Feature Summary

## Wi-Fi Connectivity

With the latest Wi-Fi technology, this device can connect you to the Internet wherever you are.

## 7" Touch Screen

Touch or slide your finger on the screen, the screen responds instantly.

## Third-party Application Support

With the built-in Android™ OS, you can install a large number of third-party applications in this device. **Please note, that you need to insert an SD-Card for it.**

## Built-in G-sensor

The screen changes to landscape or portrait automatically when the device rotates.

 
## Entertainment

You can enjoy music, movies, pictures and e-books with the Mobile Tablet.

# Accessories

- USB Cable
- Quickstart
- Power Adaptor

# Buttons & Ports

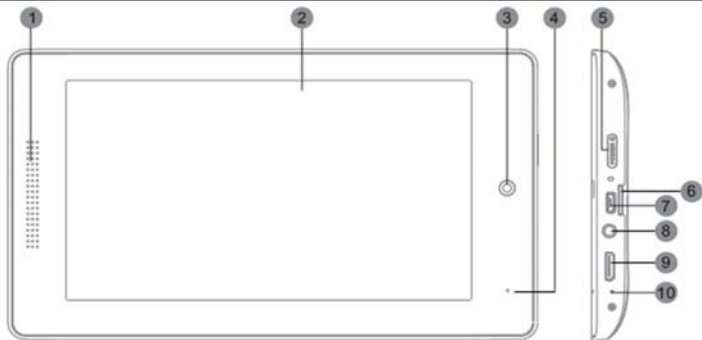

- 1. Power Button**  
Press and hold the power switch to turn on or off the device; Briefly press the switch to turn the screen on or off.
- 2. Reset pin hole**  
Press to reset the tablet if it freezes or otherwise behaves abnormal. (Use a paperclip or other small object to gently press this key.)
- 3. Mini HDMI**  
Connect to a TV or other display.  
**Note:** *Sound over HDMI must be enabled separately using the system settings.*
- 4. Volume +/- key**  
Volume + / Return  
Shortly press to increase / decrease the volume level.  
Hold pressed for 3 seconds to return to the previous screen.  
Volume - / Menu  
Hold pressed for 3 seconds to open the current apps menu.
- 5. USB 2.0 Hi-speed / USB Host**  
Connect to a computer to transfer data (e.g., music, videos, photos, files).  
Support USB stick, Surf stick, KeyBoard and Mouse.
- 6. Headphone jack**  
Audio output connection for head-phones  
**Note:** *Speaker output is automatically disabled when headphones are connected to the player.*
- 7. Power jack (DC in)**  
Charge and power the tablet with the included power adapter.
- 8. Micro SD Card Slot**  
Accommodates any standard SD/SDHC memory card.
- 9. Status LED**  
Red while charging. Turns green when battery is fully charged.
- 10. Camera**  
Front-facing camera for taking avatar pictures

## Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.

**To charge the battery**, connect the device to any standard wall outlet via the DC-IN port using the power adaptor. It takes about 5 hours to fully charge the battery.

### Note:

 
- You can operate the device even when it is being charged. But for extended battery life, it is suggested NOT to use the device when it is charging.*
- It is recommended to charge the battery before you use the device for the first time.*
- For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.*

## Installing Memory Card

This device can read files directly from memory card.

To use a memory card, find the card slot at the bottom of the device and then insert the memory card into the slot in the correct orientation. To access the files stored in the memory card, enter the **Explorer** mode by tapping the Explorer icon and select the "SD Card" directory.

- Check that the micro SD card is in the correct position with the contact pin facing upwards as illustrated. You may damage the card and the reader if SD card is not inserted in correct position.

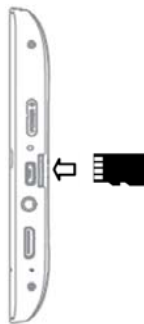


- Push the SD card into the card slot until it clicks.
- To remove SD card, push the SD card once again until it clicks.

**Note:** We recommend using only MicroSD or Micro SDHC cards up to 16GB capacity.

- When a SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content.
- Please avoid inserting or ejecting micro SD card when other operation is running as this may cause the system hang.
- Do Not remove the card if the content inside the card is being played. This will halt the operation of the device and might cause a system hang.

## Transferring Files

Before reading or playing files, you need to transfer media files from a computer to the device.

- (1) Connect the device to a computer with the supplied USB cable.
- (2) Once connected, two removable disk drives will show on your computer. One represents the internal memory of the device, and the other represents the memory card inserted into the device. Now you can copy files from or to these disk drives just as you would on your hard drive.
- (3) Choose “Turn off USB Storage” and then tap “Turn Off” to disconnect the device from computer.
- (4) Disconnect the device from the PC safely.
  - a) Left-click the  icon at the right bottom corner of the computer desktop.
  - b) Click the pop-up mini-window message of “Stop the USB Mass Storage Device – Drive (X).”
  - c) Disconnect the device from the computer.

**Note:** The pre-installed applications and Android OS occupy a considerable part of capacity – nearly more than 1GB, it is normal that you see huge difference between available memory space and total capacity.

## Turning On/Off

**To turn on the device,** press and hold the **Power** button on the unit until you see the boot-up screen then release. It may take a few minutes to start up the system, please wait before you proceed.


**To turn off the device,** press and hold the **Power** button until you see the option “Power Off”, tap on “Power Off” and then tap on “OK”.

 
**Tip:** This device will sleep with the screen off if it stays inactive for a few seconds. You can briefly press the **Power** button to turn on the screen and wake it up.

## Screen Lock

The screen automatically turns off and locks itself after a set period of time. When the screen turned off, press the **Power** button to light up the screen.



Push the lock icon  and drag it to the surrounding edge to unlock.

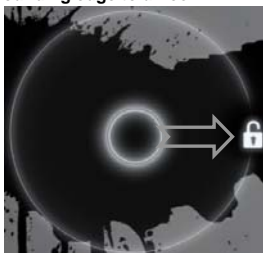



# Home Screen



a. Google Search Bar	
b. Page indicator	Shows the current home screen position
c. Applications icon	<p>Tap on this icon to reveal all applications installed on your Tablet</p> <ul style="list-style-type: none"> <li>- You can copy the applications onto the Home screen by pressing and holding on their icons.</li> <li>- You can delete the application from the Home Screen by dragging their icons to the Application Tab. To delete a Home screen item, hold your finger onto it until it is highlighted, then drag it to the Application Tab which has become a trash icon.</li> </ul>
d. Apps to Home	Easily add apps to the available home screens by drag and drop
e. Music player	Tap to select stored music files
f. App Center	Select and install new applications
g. Aldiko	To read and manage e-books in ePub or PDF format
h. Browser	Tap to launch the Browser to visit your favorite websites.
i. E-Mail	To open the mail client
j. Galerie	Picture view
k. Video	Video playback
l. System settings	
m. Back soft key	Tap to return to the previous screen. If the keyboard is on the screen, tap to close the keyboard.
n. Home soft key	<p>Tap to return to the home screen.</p> <p>Tap and hold to view a list of recently used applications; touch an application in the list to launch it.</p>
o. Running apps	Show apps which are currently running in background.
p. Menu soft Key	<p>Tap to view the option menu</p> <p><i>Note: When you Tap the Menu key from within an application, you will see the options for that application. To view the Android system options, tap the Menu key from the home screen.</i></p>
q. System Hints	<p>Notifies the user if attached memory or updates are available and other system status information's. Tap at the messages to show more information and options</p> <p>Appears when a wireless connection was established</p>
r. Wifi	
s. GSM	Shows the GSM signal quality while using an UMTS USB stick
t. Battery Charge	Shows the status of the battery
u. System tasks	Appears if system tasks like the alarm function are running.
v. Current Time	Indicate the time location

## Display all Applications

The device supports most of popular third-party applications. It has many useful applications pre-installed, such as music player, video player, photo viewer, alarm clock, calculator, etc. Furthermore, you can add more applications to the device by installing them manually.

To display all applications installed on your device, tap the Application Tab. Refer to the figure below.





# Using the Touch Screen

This device is equipped with a touch-screen. Following are a few tips on how to use the touch screen.

**Tip:** For a proper usage please use your fingernails or a soft-plastic stylus (not provided) to tap on the screen.

## Main Touch Screen Actions

- In many applications, you can go back one level in the interface by tapping on the **Back** icon  (at the top right corner of the screen).
- Wherever you are in the interface, you can go back directly to the **Home Screen** by tapping on the Home icon  (in the top left corner of the screen).

## Other Touch Screen Actions

- When watching a video or listening to music, you can tap the progression bar to go directly to a different location in the video or song. You can also use your finger to drag the cursor in the progression bar to another location in the video or song.
- In the file browsers (File, Music, Video, Photo, etc.), you can drag your finger up and down to scroll the file list up and down.
- In the Web browser, you can scroll up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- Tap the link to open the page.



**Note:** DON'T use a pen or pencil or other sharp items to tap on the screen! This may damage the screen. DON'T place heavy or sharp edged items on the screen. Clean it carefully with a soft cloth. DON'T use cleaner.

# Access Internet

Your Tablet features built-in Wi-Fi technology so that you can access the internet via Wi-Fi network.

First of all, you need to configure a Wi-Fi network. For the Wi-Fi configuration procedure to work, you need to be in a Wi-Fi zone that will allow you to connect to it. Every time Your Tablet is in range of a network that you have already configured once, it will attempt to make a connection.

**Note:** In order to establish a Wi-Fi connection it is required to know the encryption password of the desired Wi-Fi network.

Be sure that you are allowed to use this network and that no other settings of this network like MAC address filter will deny the connection.

The MAC Address of your device can be found at: "Settings" – "About device" – "Status".

 
## Configuring WIFI Connection

(1) In the Home screen, tap on the Settings icon.




(2) Tap on the "Wireless and Network" setting to open.

(2) Tap on the "Wi-Fi" setting to turn on the Wi-Fi.

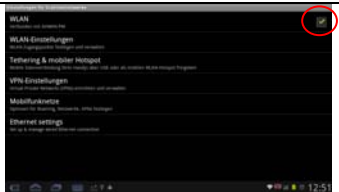

 (3) Tap the "Wi-Fi settings", your Tablet will scan automatically for available WiFi networks and display them. The list of available networks shows all the wireless networks in range of your device.

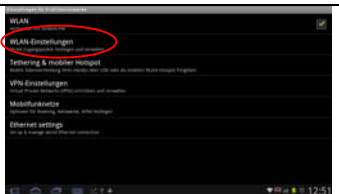

**Note:**

The available network list is constantly refreshed automatically.


When the Wi-Fi is enabled, Your Tablet will connect automatically to your configured networks when they are in range.


If Your Tablet finds a network that has never been configured, it will display a notification icon.

(4) Tap on the network you want to connect to, enter the required network information (password) and then tap on “Connect”. Your Tablet will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered. If the connection is successful, the message Connected to XXX will appear under the WIFI setting.

## Advanced Connection

To manually scan for available Wi-Fi networks,

- (1) In the “Wi-Fi settings” screen, tap the **Menu** icon , and then tap “Scan.”
- (2) If the Wi-Fi network you want to connect to does not appear in the list, scroll down the screen, then tap “Add a Wi-Fi network.” Enter the required settings, then tap “Save.”


To access the advanced network parameters (“Regulatory domain,” “IP address,” etc), tap the Menu icon , and then tap “Advanced.” Other parameters will appear. The required information can be obtained from the person who manages the network.

## Launching the Web browser

Tap the Applications icon to display all applications, and then tap the Browser icon



to launch the Web browser.

If you are already connected to a network, the Web browser will simply open and you can start browsing the Web. To access a new website, tap the Menu icon  to display the menu, and input another address.

**Note:** Not all wireless networks offer access to the Internet. Some Wi-Fi networks only link several computers together, without any Internet connection.

## Using the Virtual Keyboard


Tapping on any text input field can open the virtual board. With the virtual keyboard, you can enter a website address or any text required.

### Indications






- Caps Lock
- Backspace.
- Number and Characters /Letter Keyboard Switch.
- Space
- Enter

### Selecting Input Method


If you have installed more than one input method in this device, you can select one method by a) holding the  button until the Android keyboard settings appear; b) choosing “Input Method” and then choosing your desired one.



**Note:** The keyboard layout will change depending on the osd language settings.

## Using the Web Browser

- You can scroll the screen up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- To open a link, simply tap it.
- You can open several web pages at a time, view them all at once on the screen, and then tap one of them to view it in full screen.
- To go back to the previous page that you browsed, tap the Back icon .
- To display the available menu items, tap the Menu icon .
- To go back directly to the Home screen, tap the Home icon .
- Depending on where you are in the web browser, holding down on an item will give you access to more options.
- To fill in a text field, tap in the field, then use the virtual keyboard to type in the required text.
- You can tap on the screen, and select the Zoom in / out icon on lower right corner to enlarge or diminish the page.

## Web Browser Menu Items

 
When you are viewing a page, you can tap the menu icon  to display the menu items.

<b>New window</b>	Allows you to open new windows.
<b>Bookmarks</b>	<p>Will open the <b>"Bookmarks"</b> manager. You will see three tabs: <b>"Bookmarks," "Most visited,"</b> and <b>"History."</b></p> <p><b>"Bookmarks"</b> shows you a list of bookmarks. Just tap one of them to open it in the current window. Holding down a bookmark will give you access to several options (you will be able to edit it, rename it, delete it, etc.). You can also use the Menu icon  which will allow you to bookmark the last-viewed page.</p> <p><b>"Most visited"</b> and <b>"History"</b> allow you to access your "Most visited" sites and your visit history. In the "History" tab, the Menu icon  allows you to clear the history.</p>
<b>Refresh/ Stop</b>	<p>"Stop" will stop loading the web page, if it is currently loading.</p> <p>"Refresh" will refresh the current web page, if it has stopped loading.</p>
<b>Windows</b>	When you have several windows currently opened, tap <b>"Windows"</b> to display them all at once on the screen. Just tap one of the small windows to view it in full screen, or tap the Close icon in the small window to close the window.
<b>Forward</b>	Will go to the next page that you browsed.
<b>More</b>	Will give you access to other options ("Find on page," "Select text," "Page info," "Downloads," "Settings" etc.).

# Reading E-Books

## Start Reading

- (1) In the **Home Screen**, tap the Ebook Reader shortcut to enter the e-book reader mode.
- (2) Tap an e-book to start reading immediately.

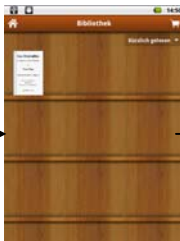

rusted leaves, when the darkness is deep and starless, or when the moon and the wind are making openings in the clouds and losing themselves in the shadows, the background suddenly becomes lighted. The black lines sink towards and are lost in the shades, like meteors of the infinite. The passer-by cannot refrain from recalling the immemorial traditions of the place which are connected with the gibbet. The solitude of this spot, where so many crimes have been committed, had something terrible about it. One almost had a presentiment of meeting with traps in that darkness, all the confused forms of the darkness seemed suspicious, and the long, hollow squares, of which one caught a glimpse between each tree, seemed graves by day it was ugly; in the evening melancholy; by night it was sinister.

In summer, at twilight, one sees, here and there, a few old women seated at the foot of the elms, on benches mottled with rain. These good old women were fond of begging.

However, this quarter, which had a superstitious rather than an antique air, was trending even there to transfiguration. Even at that time any one who was

### Note:

- Make sure your e-books are in format of PDF and EPUB supported by the device.
- E-book cover will show as defaulted cover by the device if the e-book has no cover data. That's why you see some e-book covers are the same.
- We recommend to modify or disable the automatic display turn off function while reading.

## History and My Library

You can tap "History" to view your reading history or tap "My Library" to enter the e-book library. "History" shows all of the e-books that you have read by date. "My Library" shows all of e-books stored in the device.

 
### View e-book Information

In the history or e-book library, you can view information about an e-book before you start reading it. Tap an e-book, and the book name; author or publication year of the e-book should display at the top screen.

### Sort e-books

In the history or e-book library, you can sort e-books by title, author or file size by tapping on Title, Author or Size.



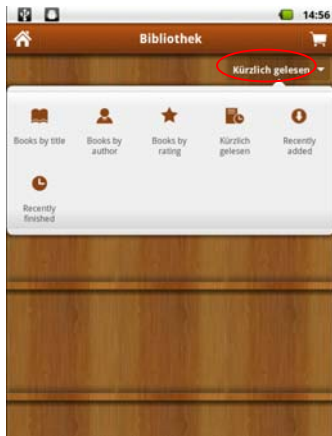


## Start Reading


To start reading an e-book, tap “Continue Read”.

## Page Up/Down

 When you are reading the e-book, you can slide your finger on the screen left and right OR press the **PREVIOUS/NEXT** buttons on the device to page up or down.

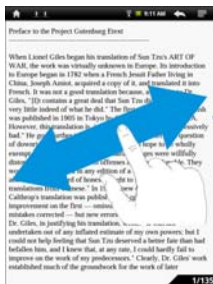


## Increase Font Size

- (1) When you are reading, tap the **Menu** icon  to display e-book settings.
- (2) Tap “Font Size” to adjust the font size.
- (3) Tap a size that you want, and then tap “OK” to confirm.

## Jump to a Page

You can directly go to a page that you have specified.


- (1) When you are reading, tap the **Menu** icon  to display e-book settings.
- (2) Tap “Go to”.
- (3) Tap the page number input field to display the virtual keyboard.
- (4) Tap the numbers to input the page number.



- (5) Once you finish inputting the page number, tap “OK” to jump to the specified page.


## Use Bookmarks

You can add, delete or load bookmarks on the page.

- (1) When you are reading, tap the **Menu** icon  to display e-book settings.
- (2) Tap “Bookmarks” to display a bookmark menu. Use the menu to add, delete or display bookmarks.

## Show Outline of the e-book

You can view the outline of the e-book and then choose your desired chapter or section to read.

- (1) When you are reading, tap on the Menu icon  to display e-book settings.
- (2) Tap on “TOC” to display the outline of the e-book, and then tap the chapter that you want to read.

Section	Page
Title Page	1
epubBooks Information	2
PREFACE	3
VOLUME I—FANTINE	4
BOOK FIRST—A JUST MAN	5
CHAPTER I	6
CHAPTER II	10
CHAPTER III	14
CHAPTER IV	18
CHAPTER V	22
CHAPTER VI	26

## Download DRM protected e-books with the Adobe Digital Edition

**Attention!** Please note that you must install Adobe Digital Editions BEFORE you buy your first e-book online!

Once you have purchased ebooks online, you need to transfer them to your Tablet using the Adobe Digital Editions software which allows you to view and manage e-books protected by DRM license.

To transfer DRM-protected e-books,

1. Access the website <http://www.adobe.com/products/digitaleditions/>, and then install the Adobe Digital Edition software following the instructions online.



 
**Note:** To show the above installation window at the adobe website you must install or enable adobe flash player for the browser you are using first.

- For first time user, you will need to get a free adobe ID from adobe website.

Click on the [get an Adobe ID online] link as illustrated:



- Enter your email address and complete the online form as per instructed.
2. Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account and authorize your computer.

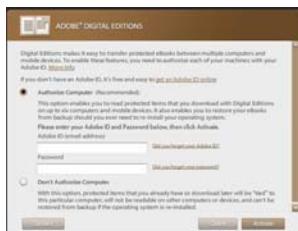

### 3. Activate your Tablet.

Connect your Tablet to computer with the USB cable and start up the Adobe Digital Editions. Click “Authorize Device” to authorize your Tablet.

### 4. Download DRM-protected PDF files to your computer.

Access the Internet and search for e-books, choose your favorite e-books and download them. If the e-book is protected by DRM, you should be prompted by DRM license information. Click “Open” to start downloading the DRM-protected e-book.

 
**Note:** You need to “OPEN” the e-Book you wish to download. DON'T use the “Save as”!



5. Click “Purchase”, and then you should see your downloaded e-book at the right panel of the Adobe Digital Editions user interface.




6. Connect your Tablet to the computer with the USB cable, and the Adobe Digital Editions should recognize your Tablet.

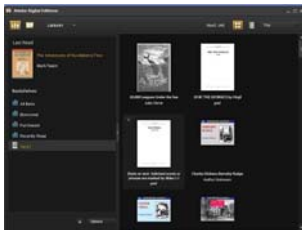

7. Click “Purchase” to see your downloaded e-book and then drag it to your Tablet.




## Playing Music

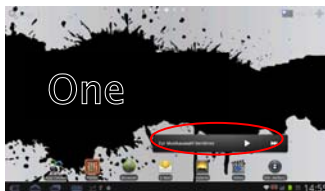 
In the **Home Screen**, tap the Music icon to enter the music player mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Music icon to enter the music mode.



## Music Library

 
You should enter the music library once you start the music player. The Music Library shows your music files sorted by categories (Artist, Album, Genre, etc.) if your music files contain these song information tags. If some of your music files do not contain information tags, they will be classified as (Unknown) in the Music Library. When new music is copied to the device, the Music Library will be updated automatically.

- You can drag your finger up and down on the file list to scroll through the list.
- Tap a track to play a track.
- To return to the Home Screen, tap  /  / 

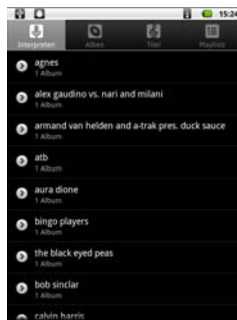









## Search for Tracks

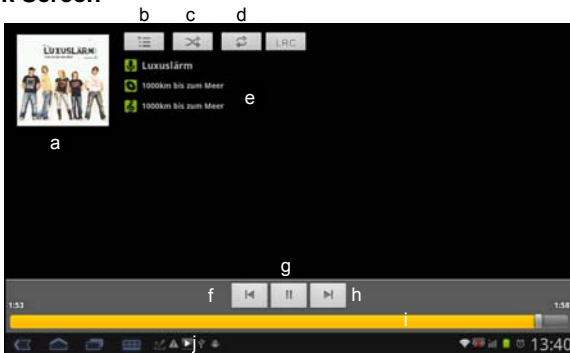 You can search for tracks in the internal memory or memory card by inputting a few key words.

- (1) Tap the Search icon , and then input a few key words of the track.
- (2) The track should be listed if found.

## Playback Screen



- CD Cover (if existing)
- Show current playlist.
- Random playback on / off.
- change replay mode
- ID3-Information's (Artist, Album etc.)
- Short press – Previous track  
Long press – Fast Rewind
- Play/Pause
- Short press – Next track  
Long press – Fast forward
- Progress bar
- Shows that the player app is running, if running in background.
  - To pause or resume the playback, tap on the Pause  / Play  icon.
  - To play the previous/next song, tap on  / .
  - You can tap on the progression bar to go directly to a different location in the song. You can also drag the cursor in the progression bar to another location in the song.
  - Tapping continuously on the ID3 information tag will search for the information about the track from the Internet.
  - To go back to the music library, tap on .
  - To go back directly to the Home screen, tap on the Home icon  or Return icon .



# Playing Video

In the **Home Screen**, tap the Video Player icon to enter the video player mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Video Player icon to enter the video mode.



## Navigate through Video Files



 
You should see the video list when you enter the video player.










- You can drag your finger up and down on the video list to scroll the video list up and down.
- Tap a video to start playing.
- You can go back directly to the **Home screen** by tapping on the Return icon  or Home icon .

## Playback Screen




- Decrease volume
- Progression bar
- Increase volume
- Add Bookmark
- Brightness
- Previous video
- Play/Pause icon
- Next video
- Change View Mode
- Return
- Video settings

- Tap on the  /  icon to pause/resume the video,
- Tap on "" to display the menu items.
- Tap on the progression bar to go directly to a different location in the video. You can also use your finger to drag the cursor in the progression bar to another location in the video.

- Tap on  /  to adjust the volume.
- Tap on  to set a bookmark at the current spot in the video. Please note only one bookmark can be set for one video, and the new bookmark should cover the old one. To resume playing a video from the bookmark, go to the Home Screen, enter the Video Player, and tap on the bookmarked video. You should be prompted to “Play from beginning” and “Play from bookmark”. Select “Play from bookmark”. In default, the video plays from beginning. To remove the bookmark, tap on  to display the menu, and then choose “Delete Bookmark”.
- Tap on  to adjust the brightness of screen.
- Tap on  /  to play the previous or next video.
- Tap on  to change the aspect ratio of screen.
- Tap on  to stop playing and return the video list.

## Video Playback Settings

 
Tap on the  icon to display the video settings.

Play from beginning(this will delete bookmark)	Delete bookmark and play from beginning.
Delete Bookmark	Delete the video bookmark.
Help	Get instructions on playing video.
Play Mode	<p><b>Single</b> – plays the current video and then stops after playing.</p> <p><b>Repeat One</b> – Repeat the current video.</p> <p><b>Repeat All</b> – Repeat all videos.</p>
Return	Exit from the menu.



# Viewing Photos

In the **Home Screen**, tap the Photo Browser icon to enter the photo viewer mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Photo Browser icon to enter the photo mode.

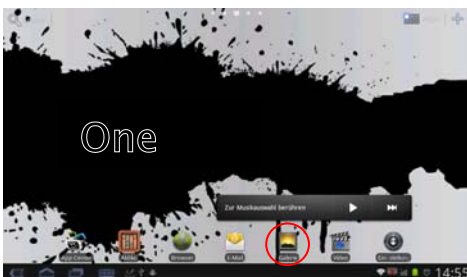

## Photo Thumbnails

The first screen of the Photo mode shows all the photos and subfolders located in this device or memory card in thumbnails.




To view a photo, tap its thumbnail to open it. If a photo is in a subfolder, open the subfolder and you will see your photo thumbnail.








## Viewing Photo

When you are viewing picture, you can tap on the screen to show a floating toolbar at the bottom of the screen.



- To start/pause a slideshow, tap on the Slideshow icon .
- Wipe left or right to move to the next or previous picture.
- Tap on  to enlarge the current picture. tap at the enlarged picture and move to change the view . Press  to zoom out.

 
Tap on „More“ to access additional options.

- Press  to turn the picture by 90° to the left.
- Press  to turn the picture by 90° to the right.
- Tap on  to show more details about the current picture file.
- Use  to set the current picture as home screen background.
- Tap on  to cut he current view.

Select „Save“ to save a copy from the current picture with the selected part only.





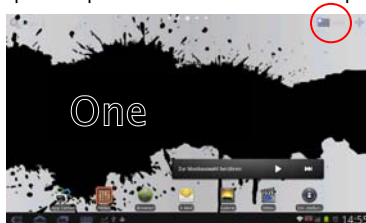


# File Explorer

In the Home Screen, tap the Applications shortcut to display all applications and then tap the Explorer icon to enter the file explorer mode.



EN

## Navigate through Files and Folders

- You can drag your finger up and down to scroll the file list up and down.
- To open a file or folder, tap the file/folder.
- Tap the menu icon , you can manage the applications (see details in the "Manage Application" section).
- You can go back or forward one level in the interface by tapping on the **Back** icon  or **Next** icon .
- You can go back one level in the directory by tapping on the LevelUp button .
- Wherever you are in the interface, you can go back directly to the Home screen by tapping on the Return icon  or Home icon .
- Tap the Home icon  to go to the root directory.

## Using the Toolbar

You can use the toolbar to navigate through your device's internal memory/ memory card and delete or copy files.


*Tapping on the arev area can hide/disply the toolbar.*



*Sliding your finger on the toolbar can scroll through all tools.*

<b>Home</b>	Go to the Home Screen.
<b>LevelUp</b>	Go back one level in the directory.
<b>Multi</b>	Select more than one file.
<b>Editor</b>	Copy, delete, move, paste or rename the file or folder.
<b>Back</b>	Go back one level in the interface.
<b>Next</b>	Go forward one level in the interface.

## Copy/Move Files and Folders

- (1) In the file list, scroll up and down by sliding your finger to select the file/folder that you want to copy or move.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Copy" or "Move" from the pop-up menu.
- (4) Navigate to the location where you wish to copy or move the file/folder to.
- (5) Select the Editor icon  from the toolbar and then choose "Paste."



## Delete Files and Folders



- (1) In the file list, scroll up and down the list by sliding finger to select the file/folder that you want to delete.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Delete" from the pop-up menu, then select "Delete" to confirm or "Cancel" to quit.

## Rename Files and Folders

- (1) In the file list, scroll up and down the list by sliding finger to select the file/folder that you want to rename.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Rename" from the pop-up menu.
- (4) Tap the input field to display the virtual keyboard, and then choose letters from the virtual keyboard to rename the file/folders.
- (5) Tap "OK" to confirm the new name.

## Select Multiple Items

 
You can select more than one file or folder together.

- (1) In the top toolbar, tap the Multi icon .
- (2) Tap the files/folders you want to choose. The file/folder name turns red when selected. (To deselect the file/folder, tap it again.)
- (3) Once you finished selection, you can delete, copy or move the selected files by tapping on the Editor icon .

# E-mail

This device has an E-mail application pre-installed. You can send or receive e-mails from the Internet at any time with this device. Make sure you have an Internet connection before using the email service.

In the **Home Screen**, tap the Email icon to enter the E-mail application. Optionally, you can tap the Applications shortcut to display all applications and then tap the Email icon to launch the e-mail application.

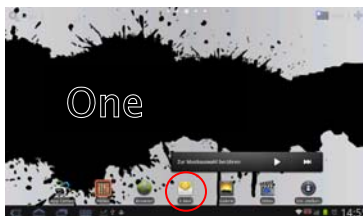

## Setup a Email Account

First you need to setup an E-mail account for receiving or sending emails.

- (1) You are prompted to setup an account once you start up the email application. Tap on "Next" to continue.
- (2) Input your email address and login password. You can set the account as default by selecting the option "Send email from this account by default". Then tap on "Next" to continue.
- (3) Type in required information for setting up the POP3/IMAP server. You can get the information from the service provider, network administrator or the Internet.
- (4) Tap on "Next" to continue after you set up the POP3 server. Your Tablet will check the server settings and will proceed to the IMAP server setting if the setting is correct. Setup the IMAP server as you do to POP3 server. Please note in the "IMAP Server" field, you should input "imap.+ domain name".
- (5) Your Tablet will check the settings. When it prompts you that "Your account is set up, and email is on its way", your account is set up successfully.
- (6) Input your name to be displayed in every email and then tap on "Done" to finish.



**Note:** If you have more than one account, every time when you start up the email application, you enter the default email account.

## Manage Accounts


You can setup more than one account and manage these accounts by checking information about the account, adding another account or deleting an account.

### Add another Account


Following these steps to add another account if you want.

- (1) Launch the email application and then tap on the Menu icon  to display the menu item. Choose “Accounts” to display accounts.
- (2) Tap on the Menu icon  to display the menu item, and then choose “Add account”.
- (3) Follow the steps of setting up a Email Account to add an account.

### Delete an Email Account

- (1) When you are in the email box, tap on the Menu icon  to display the menu items.
- (2) Tap on “Accounts” to display all email accounts.
- (3) Hold your tap on the account that you want to delete until a menu pop up.
- (4) Tap on “Remove Account” , and then tap on “OK” to confirm.

### Check the Account Setting


- (1) When you are in the email box, tap on the Menu icon  to display the menu items.
- (2) Tap on “Accounts” to display all email accounts.
- (3) Hold your tap on the account that you want to check until a menu pop up.
- (4) Tap “Account settings” ,and then you should see all setting information about the account. You can edit these settings as you want.

## View Emails

You should enter your mailbox when you start up the email application.

- In the mailbox, you can slide your finger up and down to scroll through the email list.
- Tap on an email to open it.
- Holding your tap on the email can display a menu. With the menu, you can open, reply, forward or delete the email.

## Email Menu Items

In the email list, tap on the Menu icon  to display the menu.

<b>Refresh</b>	Refresh the emails.
<b>Compose</b>	Compose a new email.
<b>Accounts</b>	View all email accounts.
<b>Account Settings</b>	Check your account settings.

# Manage Third-party Applications

Your Tablet provides support to many useful third-party applications. You can purchase the applications to add more functions to your device. They are available online at the Internet or directly on your product.

## Pre-installed Applications

The device has pre-installed applications when it was manufactured. You can see them by tapping **Application Tab**. They are video player, audio player, photo browser, calculator etc.

## Install Applications

You can install applications manually following these steps:

- (1) Download the installation file to your computer. Make sure the file is in format of .apk which is supported by your Tablet system.
- (2) Connect your Tablet to computer with the USB cable.
- (3) Copy the installation file to your Tablet.
- (4) Disconnect your Tablet from the computer.
- (5) Turn on your Tablet and enter the file explorer mode with the Explorer.
- (6) Locate the installation file and open it.
- (7) Follow the on-screen instructions to install the application.
- (8) Once the application is installed successfully, you can find it in the application tab.

## Uninstall Applications

- (1) Tap the Settings shortcut in the Home Screen to display all system settings.
- (2) Select "Applications".
- (3) Select "Manage Applications".
- (4) Tab on the application that you want to uninstall.
- (5) Tab on "Uninstall" to uninstall the application.



**Note:** *You cannot uninstall the pre-installed applications.*

*Some of the applications developed for Android mobile might not run properly in the Tablet. Please consult the respective software developer for further information or support.*

**Caution!** *Please note that the installation of third-party application occurs on your own risk! Any up normal behavior or damage that is caused by installing third-party applications will not be an integral part of the warranty.*

# System Settings

In the Home screen, tap “**Settings**” and choose a category: “**Wireless & Networks**,” “**Sound & Display**,” “**Date & Time**,” etc.

- When a down arrow appears on the right of a parameter, this means that this setting includes sub-parameters. Tap it to display the list of sub-parameters.
- When a check box appears on the right of a parameter, tap it to enable or disable this option.
- When it is possible, you can use your finger to scroll the screen up and down to reveal settings that you don't initially see.
- When you have finished adjusting your settings, tap the Back icon  to go back to the list of settings, or tap the Home icon  to go directly to the Home screen. Your settings are saved instantly.

<b>Wireless &amp; networks</b>	<b>Wi-Fi</b> – tap on this line to enable or disable the Wi-Fi connection. <b>Wi-Fi settings</b> – allows you to set up and manage your Wi-Fi networks.
<b>Sound</b>	<b>Media volume</b> –Sets the volume for music and videos. You can also adjust the sound by using the Volume buttons, on the top of the device. <b>Notification Ringtone</b> –Set your default notification ringtone. <b>Audible selection</b> –enables/disables the touchscreen click sound. <b>SD card notifications</b> –Disable SD card notification sounds.
<b>Display</b>	<b>Brightness</b> –allows you to adjust the brightness of the screen. <b>Orientation</b> – switch the screen orientation automatically when the device rotates. <b>Animation</b> –enables/disables the display of animations when opening and closing applications. <b>Screen timeout</b> –allows you to adjust the delay before the screen automatically turns off and locks itself. To turn the screen back on, press the <b>Power</b> button once, and press it again to unlock the screen.
<b>HDMI Setting</b>	
<b>Location &amp; Security</b>	This screen gives you the possibility to allow certain Android™ applications to determine your current location. You can also define a screen unlock pattern and other security parameters.



<b>Applications</b>	This screen allows you to manage your Android™ applications. You can view information about all the applications installed on your device.
<b>Accounts &amp; Sync</b>	Setup and synchronization for e-mail accounts.
<b>Privacy</b>	This setting allows you back up or restore your system settings or data. <b>Caution!</b> <i>All old settings will be replaced.</i>
<b>Storage</b>	Check SD card and internal storage space.
<b>Language &amp; keyboard</b>	Set your preferred language and region, and configure text settings for faster and more accurate text input.
<b>Date &amp; Time</b>	This setting allows you set up the date, time, time zone and formats.
<b>Touch Panel calibration</b>	If the touch-screen is not responding properly, use this setting and follow the instructions on the screen. If the touch-screen is not responding properly, try using your fingernails or a soft-plastic stylus (not provided).
<b>About Device</b>	Display information about Your Tablet system.

# Troubleshooting

EN

## **Reset this device**

- If the **Power** button does not reset your device, use the “pinhole reset” button, located on the back the device.

## **Touch-screen Problems**

- If the touch-screen is not responding properly, try using the “Touch-Screen Calibration” settings screen.
- If the touch-screen is not responding properly, try using your fingernails or a soft-plastic stylus (not provided).
- Check if the Application you are using has full touch-screen support.
- Don't press too hard on the screen. This might cause a wrong behavior.

## **No Wifi connection**

- Take care that Wifi is enabled and a wireless network is in range.
- Be sure that you entered the correct password. Take care of special characters and capital letters. They need to be entered as is.

## **Without sound inside earphone**

- Please confirm the volume is not in the status of Zero and the connection of earphone is ok. Please confirm the earphone is clean. The broken MP3 will produce noise with different grades even cannot play music. Please confirm the complete files. Try another pair of headphones. Take care that Wifi is enabled and a wireless network is in range.

## **The character on the display screen is in abnormal shape**

- Please confirm the language that you selected is correct.

## **No USB connection is established to the PC**

- Check cable/plug connection to the PC, Windows system configuration and USB driver. Restart PC, remove and reconnect the USB cable, reinstall drivers.

## **It is not possible to store anything at the inserted SD card**

- Please confirm that the inserted SD card is not write protected.

## **It is not possible to download e-books from odysbook.de.**

- Please disable any popup blocker.

## Wifi – Solving Connection Problems

1. Enter the Wifi-Settings.
2. Select your wifi and delete it.
3. Place a hook at „Show Password“ .
4. Check and enter the password.
5. Take care at the status messages below the network name:

<b>Problem</b>	<b>Status message</b> (Below the network name under wifi settings)	<b>Probably Reason</b>	<b>Solution</b>
Network can not be found	Network can not be found	<ul style="list-style-type: none"> <li>- SSID invisible</li> <li>- Wifi signal too weak</li> </ul>	<ul style="list-style-type: none"> <li>- Enable visibility of the SSID at the router settings</li> <li>- decrease the distance to your router</li> </ul>
No Internet	<ul style="list-style-type: none"> <li>-&gt; Connecting</li> <li>-&gt; Not connected</li> </ul>	<ul style="list-style-type: none"> <li>- MAC filter active</li> </ul>	<ul style="list-style-type: none"> <li>- deactivate the filter at the router settings</li> </ul>
No Internet	<ul style="list-style-type: none"> <li>-&gt; Connecting</li> <li>-&gt; Authorization</li> <li>-&gt; Not connected</li> </ul>	<ul style="list-style-type: none"> <li>- Wrong or wrong written password</li> </ul>	<ul style="list-style-type: none"> <li>- check password and enter again</li> </ul>
No Internet	<ul style="list-style-type: none"> <li>-&gt; Connecting</li> <li>-&gt; Authorization</li> <li>-&gt; receiving IP-address</li> <li>-&gt; Not connected</li> </ul>	<ul style="list-style-type: none"> <li>- Wrong router configuration</li> <li>- Wifi signal too weak</li> <li>- DHCP Server off</li> </ul>	<ul style="list-style-type: none"> <li>- Delete the list of connected engines at the router settings</li> <li>- decrease the distance to your router</li> <li>- Enable DHCP at the router settings</li> </ul>

# Specifications

<b>Configurations</b>	
CPU	1,2 GHz Processor (Cortex A8 Kernel)
DDR	512MB DDRIII Ram
Built-in operating system	Android OS 2.3
Hardware	IBM PC or compatible PC, Note-book or Macintosh with USB port
Internal Memory	At least 4GB( 2.5GB for file storage, 256MB for apps installation, 1.2GB for internal system use)
Memory Card	Micro SD card: Up to 16GB(SDHC)
<b>System Requirements</b>	
Operation System	Windows2000/XP/Vista/windows 7and MAC OS 10.4 or above
USB Interface	USB2.0 High speed
<b>Features</b>	
Output Port	3.5mm earphone port, built-in speakers
E-book Format	EPUB, PDF
Audio	MP3 (MPEG1/2/2.5 Audio Layer 1/2/3) ; WMA (Version 4,4.1,7,8,9) WAV (MS-ADPCM , IMA-ADPCM , PCM) APE (Version 3.95,3.97,3.98,3.99,normal and fast except high and extra high) FLAC (FLAC Audio) AAC (ADIF, ATDS Header AAC-LC and AAC-HE ) (For license) OGG
Video Format	AVI (Xvid, Divx 4/5/6 except GMC&QPEL, Divx for License, Audio Codec: MP3, AC3) RM/RMVB (Real Video Codec 8/9/10 except G2, Audio Codec: Real Audio) FLV ( Sonnati H.263, H.264 except O2 VP6) (For license) MKV (H.264, MPEG4, XVID, DIVX4/5/6) MOV (MPEG4, H.264, Audio Codec:MP3) 3GP/MP4(H.264/H.263/MPEG4/XVID/DIVX4/5/6)
Photo Format	JPEG, BMP, GIF(static), PNG
WI-FI	Available
Language	Multinational languages

Technical Parameter	
Read speed	8.7-9MB/S (MLC flash)
Write speed	4.5-4.8MB/S (MLC flash)
Audio Bit Rate	MP3: 8 ~ 320Kbps WMA: 8 ~ 320Kbps OGG: Q1- Q10
Video Resolution	AVI (Max.1280X720); RM/RMVB (Max.1280X720); FLV(Max.1280*720); MKV (Max. 1280X720); MOV (Max. 1280X720)
Video Bit rate	Max. 6Mbps (MPEG4, XVID, DIVX4/5/6); Max. 2.5Mbps (H.264, Real video 8/9/10); Max. 2Mbps (Sorenson H.263).
Photo Resolution	JPEG (Baseline) (Max.8000*8000), GIF(Static) (Max.1000*1000)
Network Connection Media	Wi-Fi (802.11 b/g/n)
Battery Charge Time	About 6 Hours
Battery Life	About 4 hours
Display	7" TFT LCD, Touchpad (capacitive touch pad), 800 x 480 pixels.
SNR	65dB above
Frequency Response Range	20Hz—20KHz
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V ~ 50/60Hz, DC Output 5V/2A
Physical Parameters	
Storage Temp.	-20□ ~ +65□
Ambient Temp.	0□ ~ +50□
Operation Relative Humidity	20% ~ 90% ( 40□ )
Storage Relative Humidity	20% ~ 93% ( 40□ )

# Warranty Conditions

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

## We offer a warranty on our products in accordance with the following conditions:

1. AXDIA products are covered by a 24 month warranty. We will resolve damages or defects on AXDIA products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.

The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.

2. The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. AXDIA reserves the right to exchange the product for a replacement product of equal value if the product that is sent in cannot be repaired within a reasonable time or at reasonable cost. The product can also be exchanged for a different model of the same value. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.
3. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our products.
4. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
5. Any other or further claims are excluded, especially those for replacement due to damage caused outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, loss of earnings or interruption to business.

## Asserting a warranty claim

1. To make use of the warranty service, you must contact the AXDIA Service Center by e-mail, fax or phone (see below for contact details). You can also use the service form on our website or on the back of the warranty conditions.
2. AXDIA Service Center will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and you will be asked to send the product to AXDIA.

**IMPORTANT: AXDIA will only accept parcels that have an RMA number.**

## Please observe the following when sending the product:

1. Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the products (no cables, CD's, memory cards, manuals, etc.), unless the AXDIA Service Centre specifies otherwise.
2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. You must enclose a copy of the sales slip as proof of purchase.
4. Once AXDIA has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

## Service outside of warranty

AXDIA can refuse any service claim made that is not covered by the warranty. If AXDIA agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs.

AXDIA will not accept any packages that have not first been approved by AXDIA by means of an RMA (Return Material Authorization).

