


Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
 - a) The battery level icon displays  (An empty battery)
 - b) The device powers off automatically when restarted.
 - c) There is no response when pressing keys with keys unlocked and battery full.
- When the device is being formatted or transferring a file, do not interrupt the connection. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor is disconnected from the device, the device will remain operable as long as the battery has sufficient charge.

- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
- Do not leave the device on in a confined space such as a book case or similar. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No open flames, such as lighted candles, should be placed on the device.
- Use the device in moderate climates.
- Never disconnect the USB cable from your e-book reader to the PC during a data transfer or formatting. Correctly disconnect the device from the operating system. Information loss and malfunctions can occur.



Disposal

Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.

The rechargeable battery in this device may not be replaced by the user. Please contact our service support center should the battery require replacing.

Listening Cautions



Hearing Safety

Listen at a moderate volume: Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss. Sound can be deceiving, over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there. To establish a safe volume level: Set your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, without distortion. Listen for reasonable periods of time: prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. Be sure to use your equipment reasonably and take appropriate breaks. Be sure to observe the following guidelines when using your headphones. Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts. Do not turn up the volume so high that you can't hear what's around you. You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

EN

SUPPORT

<http://www.odys.de>

support@odys.de

On our website you will find the latest information about this product, other products of our enterprise, our company itself and valid warranty terms. The latter you will find under Service - Downloads. Firmware upgrades for this device are also offered on our website. For questions or problems read our FAQs on our website or contact our after sales service.

Appropriate use

Device is designed for playing music and video files in commonly used formats, showing photos and access internet functions using the build in wifi function. It is exclusively meant for this purpose and must only be used for the same.

This also includes paying attention to all information contained in this operating manual, especially in the safety instructions. Any other usage is considered to be improper and may lead to material damages and even personal injuries. Moreover, it will result in the immediate loss of guarantee. The manufacturer does not bear any liability for damages caused due to improper use.

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Table of Content

EN

Safety Precautions	1
Listening Cautions	3
Appropriate use	3
Feature Summary.....	5
Accessories	5
Buttons & Ports.....	6
Charging Battery.....	7
Installing Memory Card.....	7
Transferring Files.....	8
Turning On/Off	8
Screen Lock.....	8
Home Screen.....	9
Using the Touch Screen	11
Access Internet.....	12
Internet Access - UMTS	14
Virtual Keyboard	17
Using the Web Browser.....	18
Sending/Receiving E-Mails	20
Reading E-Books	23
Playing Music	28
Video / Photo Playback	30
ES File Explorer.....	33
Manage Third-party Applications	36
HDMI Output.....	37
System Settings.....	38
Troubleshooting.....	41
Troubleshooting.....	43
Specifications	44
Warranty Conditions	46

Feature Summary

Wi-Fi Connectivity

With the latest Wi-Fi technology, this device can connect you to the Internet wherever you are.

8" Touch Screen

Touch or slide your finger on the screen, the screen responds instantly.

Third-party Application Support

With the built-in Android™ OS, you can install a large number of third-party applications in this device. **Please note, that you need to insert an SD-Card for it.**

Built-in G-sensor

The screen changes to landscape or portrait automatically when the device rotates.

Entertainment

 
You can enjoy music, movies, pictures and e-books with the Mobile Tablet.

Accessories

- USB Cable
- Quickstart
- Power Adaptor

Buttons & Ports

EN

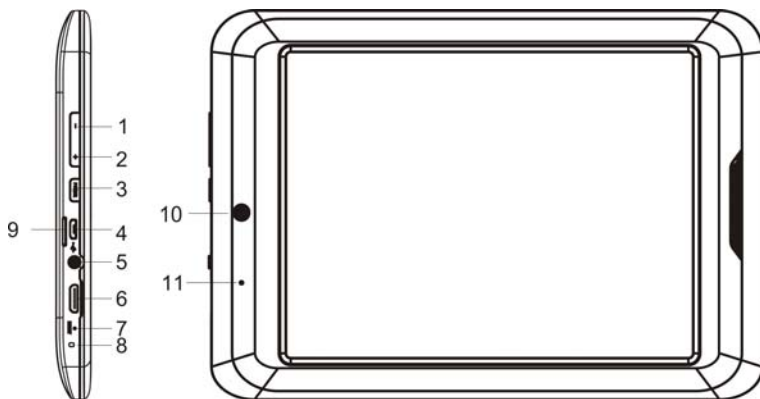

- 1. Volume - / Menu** Shortly press to decrease the volume level.
- 2. Volume +/- key** Shortly press to increase the volume level.
- 3. Power Button** Press and hold the power switch to turn on or off the device; Briefly press the switch to turn the screen on or off.
- 4. USB 2.0 Hi-speed / USB Host** Connect to a computer to transfer data (e.g., music, videos, photos, files). Support USB stick, Surf stick, KeyBoard and Mouse.
- Power jack (DC in)** Charge and power the tablet with the included power adapter.
- 5. Headphone jack** Audio output connection for head-phones
Note: *Speaker output is automatically disabled when headphones are connected to the player.*
- 6. Mini HDMI** Connect to a TV or other display.
Note: *Sound over HDMI must be enabled separately using the system settings.*
- 7. Reset pin hole** Press to reset the tablet if it freezes or otherwise behaves abnormal. (Use a paperclip or other small object to gently press this key.)
- 8. Status LED** Red while charging. Turns green when battery is fully charged.
- 9. Micro SD Card Slot** Accommodates any standard SD/SDHC memory card.
- 10. Camera** Front-facing camera for taking avatar pictures
- 11. Microphone**

Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.

To charge the battery, connect the device to any standard wall outlet via the USB port using the power adaptor. It takes about 5 hours to fully charge the battery.

Note:

 
- You can operate the device even when it is being charged. But for extended battery life, it is suggested NOT to use the device when it is charging.*
- It is recommended to charge the battery before you use the device for the first time.*
- For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.*

Installing Memory Card

This device can read files directly from memory card.

To use a memory card, find the card slot at the bottom of the device and then insert the memory card into the slot in the correct orientation. To access the files stored in the memory card, enter the **Explorer** mode by tapping the Explorer icon and select the "SD Card" directory.

- Check that the SD card is in the correct position with the contact pin facing upwards as illustrated. You may damage the card and the reader if SD card is not inserted in correct position.

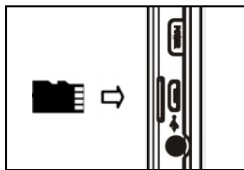


- Push the SD card into the card slot until it clicks.
- To remove SD card, push the SD card once again until it clicks.

Note: We recommend using only SD or SDHC cards up to 32GB capacity.

- When a SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content.
- Please avoid inserting or ejecting SD card when other operation is running as this may cause the system hang.
- Do Not remove the card if the content inside the card is being played. This will halt the operation of the device and might cause a system hang.

Transferring Files

Before reading or playing files, you need to transfer media files from a computer to the device.

- (1) Connect the device to a computer with the supplied USB cable.
- (2) Once connected, two removable disk drives will show on your computer. One represents the internal memory of the device, and the other represents the memory card inserted into the device. Now you can copy files from or to these disk drives just as you would on your hard drive.
- (3) Choose “Turn off USB Storage” and then tap “Turn Off” to disconnect the device from computer.
- (4) Disconnect the device from the PC safely.
 - a) Left-click the  icon at the right bottom corner of the computer desktop.
 - b) Click the pop-up mini-window message of “Stop the USB Mass Storage Device – Drive (X).”
 - c) Disconnect the device from the computer.

Note: The pre-installed applications and Android OS occupy a considerable part of capacity – nearly more than 1GB, it is normal that you see huge difference between available memory space and total capacity.

Turning On/Off

To turn on the device, press and hold the **Power** button on the unit until you see the boot-up screen then release. It may take a few minutes to start up the system, please wait before you proceed.

To turn off the device, press and hold the **Power** button until you see the option “Power Off”, tap on “Power Off” and then tap on “OK”.

Tip: This device will sleep with the screen off if it stays inactive for a few seconds. You can briefly press the **Power** button to turn on the screen and wake it up.

 
Screen Lock

The screen automatically turns off and locks itself after a set period of time. When the screen turned off, press the **Power** button to light up the screen.

Push the lock icon and drag it to the surrounding edge to unlock.



Home Screen

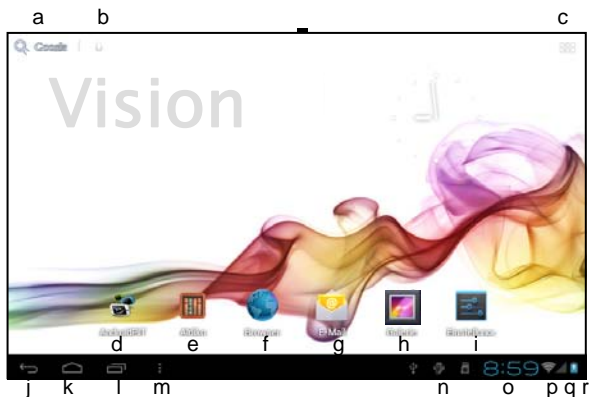

a. Google Search Bar	
b. Google Voice Search	
c. Applications icon	<p>Tap on this icon to reveal all applications installed on your Tablet</p> <ul style="list-style-type: none"> - You can copy the applications onto the Home screen by pressing and holding on their icons. - You can delete the application from the Home Screen by dragging their icons to the Cross that appears at the top of the screen .
d. App Center	Select and install new applications
e. Aldiko	To read and manage e-books in ePub or PDF format
f. Browser	Tap to launch the Browser to visit your favorite websites.
g. E-Mail	To open the mail client
h. Galerie	Picture view
i. System settings	
j. Back soft key	Tap to return to the previous screen. If the keyboard is on the screen, tap to close the keyboard.
k. Home key	<p>Tap to return to the home screen.</p> <p>Tap and hold to view a list of recently used applications; touch an application in the list to launch it.</p>
l. Running apps	Show apps which are currently running in background.
m. Menu soft Key	<p>Tap to view the option menu</p> <p><i>Note: When you Tap the Menu key from within an application, you will see the options for that application. To view the Android system options, tap the Menu key from the home screen.</i></p>
n. System Hints	Informs the user if attached memory or updates are available and other system status information's
o. Current Time	Indicate the time location
p. Wifi	Appears when a wireless connection was established
q. GSM	Shows the GSM signal quality while using an UMTS USB stick
r. Battery Charge	Shows the status of the battery

Display all Applications

The device supports most of popular third-party applications. It has many useful applications pre-installed, such as music player, video player, photo viewer, alarm clock, calculator, etc. Furthermore, you can add more applications to the device by installing them manually.

To display all applications installed on your device, tap the Application Tab. Refer to the figure below.





Using the Touch Screen

This device is equipped with a touch-screen. Following are a few tips on how to use the touch screen.

Tip: For a proper usage please use your fingernails or a soft-plastic stylus (not provided) to tap on the screen.

Main Touch Screen Actions

In many applications, you can go back one level in the interface by tapping on the **Back** icon  (at the lower left corner of the screen).

Wherever you are in the interface, you can go back directly to the **Home Screen** by tapping on the Home icon  (in the lower left corner of the screen).

Other Touch Screen Actions

- When watching a video or listening to music, you can tap the progression bar to go directly to a different location in the video or song. You can also use your finger to drag the cursor in the progression bar to another location in the video or song.
- In the file browsers (File, Music, Video, Photo, etc.), you can drag your finger up and down to scroll the file list up and down.
- In the Web browser, you can scroll up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- Tap the link to open the page.

Note: DON'T use a pen or pencil or other sharp items to tap on the screen! This may damage the screen. DON'T place heavy or sharp edged items on the screen. Clean it carefully with a soft cloth. DON'T use cleaner.



Access Internet

Your Tablet features built-in Wi-Fi technology so that you can access the internet via Wi-Fi network.

First of all, you need to configure a Wi-Fi network. For the Wi-Fi configuration procedure to work, you need to be in a Wi-Fi zone that will allow you to connect to it. Every time Your Tablet is in range of a network that you have already configured once, it will attempt to make a connection.

 
Note: In order to establish a Wi-Fi connection it is required to know the encryption password of the desired Wi-Fi network.

Be sure that you are allowed to use this network and that no other settings of this network like MAC address filter will deny the connection.

The MAC Address of your device can be found at: "Settings" – "About device" – "Status".

Configuring WIFI Connection

(1) In the Home screen, tap on the Settings icon.

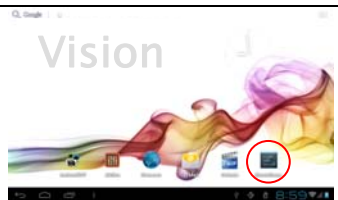


(2) Tap on the "Wireless and Network" setting to open.

(2) Tap on the "Wi-Fi" setting to turn on the Wi-Fi. your Tablet will scan automatically for available WiFi networks and display them. The list of available networks shows all the wireless networks in range of your device.



 (3) The list of available networks will be shown at the right side

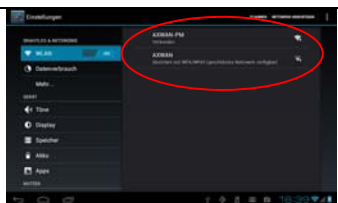

Note:

The available network list is constantly refreshed automatically.

When the Wi-Fi is enabled, Your Tablet will connect automatically to your configured networks when they are in range.

If Your Tablet finds a network that has never been configured, it will display a notification icon.

(4) Tap on the network you want to connect to, enter the required network information (password) and then tap on "Connect". Your Tablet will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered. If the connection is successful, the message Connected to XXX will appear under the WIFI setting.

Advanced Connection

To manually scan for available Wi-Fi networks,

In the "WIRELESS&NETWORKS" screen, tap the **SCAN icon** (at top right corner)


,If the Wi-Fi network you want to connect to does not appear in the list, s, then tap "ADD NETWORK." Enter the required settings, then tap "Save."

Launching the Web browser

Tap the Applications icon to display all applications, and then tap the Browser icon



to launch the Web browser.

If you are already connected to a network, the Web browser will simply open and you can start browsing the Web. To access a new website, tap the Menu icon 

to display the menu, and input another address.

Note: Not all wireless networks offer access to the Internet. Some Wi-Fi networks only link several computers together, without any Internet connection.

Internet Access - UMTS

For mobile Internet access you can use common UMTS Internet sticks with your tablet.

EN

Please note:

- Unfortunately, not all UMTS (3G) dongles can be used with this device. You find a list of all supported dongles in the menu: Settings – Wireless & Network – More... - 3G Support Information.
*Please only use one of the listed dongles! Currently these are:
Huawei E220, E261, E153, E272, EC122, EC150, EC189, EC167, EC1261, E173u, E1820, E1750, E1782, E160E, EC156, EC1270, E182E, E353, ZTE MF637U, AC2766, AC2736, AC2746, MF633BP-1 and AC580.*
- This function is a special feature, which can only be used with additional accessories, which are not supplied with the device.
- For Internet connection you need a SIM card plus the respective Internet connection tariff.

Caution!

If your SIM card is PIN-protected it must be disabled before use. You can use any common mobile phone. Find the respective menu item in the security settings of your mobile phone.

Configure 3G Internet Connection

 
 
1. Use the USB adaptor cable to connect the dongle to the device.
2. Turn the device on.

After the device is turned on, press the On/Off button until the menu is displayed and press the OK button to confirm.

3. In the Home screen tap on the settings icon.



4. Open the page with installed apps
Settings –
Wireless & Network –
More...–
Mobile Networks.

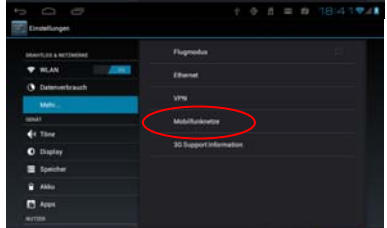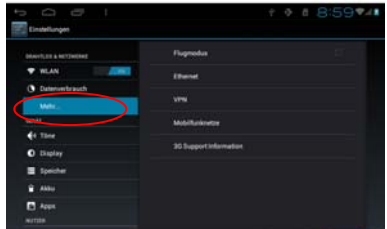

5. Enable the item "Data Enabled"
if it is not yet ticked.

6. Select item "Access Points"
to add an Internet access point.

 


7. Press the menu button and select "New APN".

Note: The list stays empty if no APN is entered or the connected dongle was not detected.

8. Enter the access data obtained from your mobile service provider. Contact your mobile service provider to obtain all required access data, if necessary.

9. Press the menu button and select "Save" to save the settings.

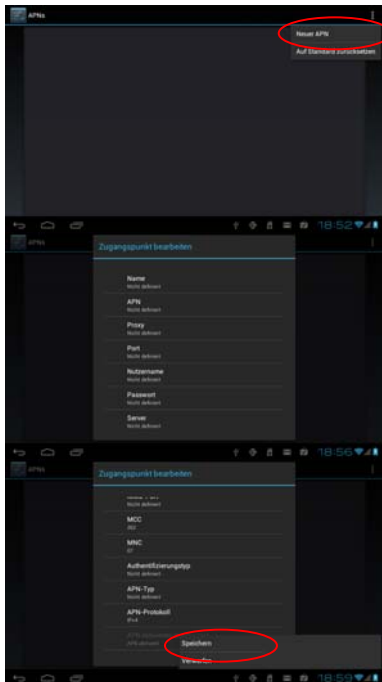

10. The list of set APNs is displayed. After setup generally only one value is listed.

11. Ensure that the item on the right of your entered APN is green; otherwise tap on it to activate.

12. Exit the settings and access a website with the browsers.

13. Observe the dongle status LED. It generally (depending on model) turns blue after successful connection. The LED flashes blue if the connection to the provider is established, but no data are transmitted yet.

Caution!

A dongle must be connected to add an access point!

Observe the 3G icon on the status bar. The connection is available if it is displayed.

Re-connect the dongle with the device if it is not displayed.

The letters at the connection icon show the current connection speed.

H = HSDPA (highest speed)

3G = UMTS

E = EDGE

G = GPRS (lowest speed)

Contact our customer support at support@axdia.de if you require help.

Virtual Keyboard

Tapping on any text input field opens the virtual keyboard. Enter a website address or any required text with the virtual keyboard.

View



- Shift lock
- Back space
- Toggle between numbers/letters
- Space bar
- Enter
- Android keyboard settings

Select Input Method

- Open the Android keyboard settings and select the input method if more than one input method is installed.

Please note: *The keyboard layout changes according to OSD language settings.*


Using the Web Browser


EN



 
- You can scroll the screen up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- To open a link, simply tap it.
- You can open several web pages at a time, view them all at once on the screen, and then tap one of them to view it in full screen.

• To go back to the previous page that you browsed, tap the Back icon 


To display the available menu items, tap the Menu icon 

To go back directly to the Home screen, tap the Home icon 

- Depending on where you are in the web browser, holding down on an item will give you access to more options.
- To fill in a text field, tap in the field, then use the virtual keyboard to type in the required text.
- You can tap on the screen, and select the Zoom in / out icon on lower right corner to enlarge or diminish the page.

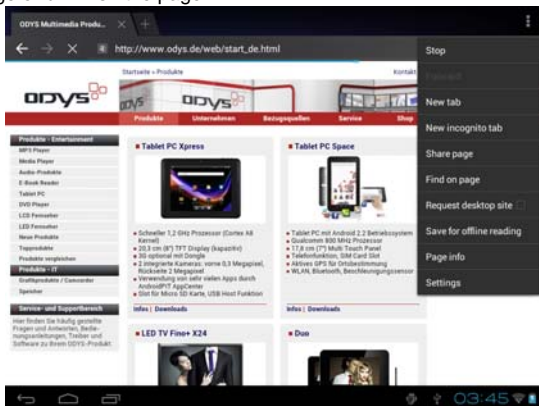

Webbrowser options

While a Web page is prompted press the menu key  at the top right corner, to open the browser settings.

Refresh	Refresh the current page after it was fully loaded.														
Forward	To open the next page if existing.														
NewTab	Open a new tab														
New incognito tab	Open a new tab that will not be saved in the history. There will also be no cookies crated.														
Share page	Share the current page by mail.														
Find on page	Find a word at the page.														
Request desktop site	To view the pages in desktop style.														
Save for offline reading	Stores the current page at the internal memory for later offline use. Note: Containing functions or links may not work using the offline version.														
Page info	Informations about the current page.														
Settings	Additional browser settings: <table border="1" data-bbox="350 675 917 1006"> <tr> <td>General</td> <td>Select start-up page and auto-fill text functions</td> </tr> <tr> <td>Privacy & security</td> <td>To manage formular data, cache, cookies and history</td> </tr> <tr> <td>Accessibility</td> <td>Text settings and contrast</td> </tr> <tr> <td>Advanced</td> <td>Advanced browser settings</td> </tr> <tr> <td>Bandwidth mangement</td> <td>Settings for data transfer</td> </tr> <tr> <td>Labs</td> <td>Experimental functions</td> </tr> <tr> <td>Debug</td> <td>Detailed Outlook settings (User Agent)</td> </tr> </table>	General	Select start-up page and auto-fill text functions	Privacy & security	To manage formular data, cache, cookies and history	Accessibility	Text settings and contrast	Advanced	Advanced browser settings	Bandwidth mangement	Settings for data transfer	Labs	Experimental functions	Debug	Detailed Outlook settings (User Agent)
General	Select start-up page and auto-fill text functions														
Privacy & security	To manage formular data, cache, cookies and history														
Accessibility	Text settings and contrast														
Advanced	Advanced browser settings														
Bandwidth mangement	Settings for data transfer														
Labs	Experimental functions														
Debug	Detailed Outlook settings (User Agent)														

Sending/Receiving E-Mails

This device has an email app pre-installed. You can send or receive emails via the Internet. Make sure that you have an Internet connection before using the email service.

 
In the **Home screen**, tap the email icon to access the email app. Alternatively, tap on the app shortcut to display all apps and then tap on the email icon to launch the email app.




Setup Email Account

First you need to setup an email account for receiving or sending emails.

- (1) Start up the email app and you are prompted to setup an account. Tap on "Next".
- (2) Enter your email address and login password. You can set the account as default by selecting the option "Send email from this account by default". Tap on "Next".

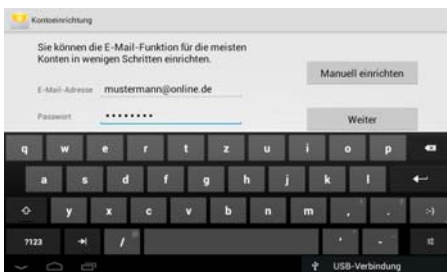

 - (3) Enter the required information for POP3/IMAP server. Contact your service provider, network administrator or search for information on the Internet.

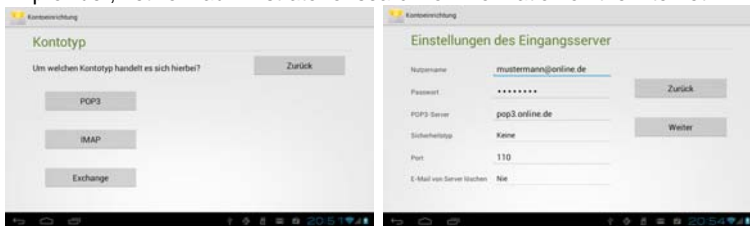

- (4) Tap on “Next” after setting the POP3 server. The device verifies the server settings and continues with IMAP server settings if your input was correct. Set up the IMAP server similar to the POP3 server. Please note that in field “IMAP Server” “imap. + domain name” must be entered.
- (5) The device verifies the settings. After “Your account is set up, and email is on its way” is displayed your account is set up successfully.
- (6) Enter your name to be displayed on emails and tap on “Done” to finish.







Please note: If you have more than one account, every time when you start up the email app, you enter the default email account.

Caution!

Please check correctness of inbox and outbox server! Depending on your service provider, there are sometimes problems with automatic settings.

Email Menu

Email functions are displayed on the right side of the email header.


	Create new email.
	Search inbox.
	Refresh current email.
	Delete current email.
	Move current email to folder.
	Check settings, Refresh / Mark as unread.

Manage Accounts


You can setup more than one account and manage these accounts by checking information about the account, adding a new account or deleting an account.

Add New Account


Follow these steps to add a new account.

- (1) Launch the email app, press the Menu icon  and tap on “Settings” in the top right corner to display the menu items. Select “Accounts”.
- (2) In the top right corner tap on “Add Account”.
- (3) Follow the steps to set up an email account.

Delete Email Account

- (1) Launch the email app, press the Menu icon  and tap on “Settings” in the top right corner to display the menu items. Select “Accounts”.
- (2) Select the account to be deleted and navigate in the settings list for this account all the way to the bottom.
- (3) Tap on “Remove Account” and tap on “OK” to confirm.

Check Account Settings

- (1) Launch the email app, press the Menu icon  and tap on “Settings” in the top right corner to display the menu items. Select “Accounts”.
- (2) Select the desired account.
- (3) The settings list for this account is displayed.

View Emails

Access your mailbox when you start up the email app.

- In the mailbox, wipe with your finger up and down to scroll through the email list.
- Tap on an email to open it.

Reading E-Books

Start Reading

- (1) In the **Home Screen**, tap the Ebook Reader shortcut to enter the e-book reader mode.
- (2) Tap an e-book to start reading immediately.



Note:

- Make sure your e-books are in format of PDF and EPUB supported by the device.
- E-book cover will show as defaulted cover by the device if the e-book has no cover data. That's why you see some e-book covers are the same.
- We recommend to modify or disable the automatic display turn off function while reading.

History and My Library

 
You can tap "History" to view your reading history or tap "My Library" to enter the e-book library. "History" shows all of the e-books that you have read by date. "My Library" shows all of e-books stored in the device.

View e-book Information

In the history or e-book library, you can view information about an e-book before you start reading it. Tap an e-book, and the book name; author or publication year of the e-book should display at the top screen.

Sort e-books

In the history or e-book library, you can sort e-books by title, author or file size by tapping on Title, Author or Size.

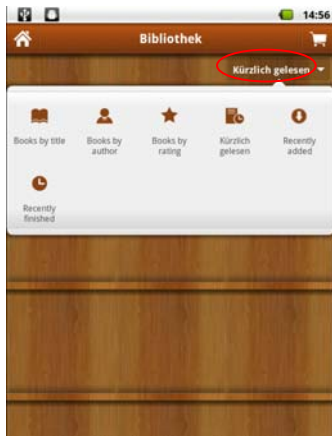

Start Reading


To start reading an e-book, tap "Continue Read".

Page Up/Down

When you are reading the e-book, you can slide your finger on the screen left and right OR press the **PREVIOUS/NEXT** buttons on the device to page up or down.




Increase Font Size

When you are reading, tap the **Menu** icon  to display e-book settings.

- (1) Tap "Text" to adjust the font size
- (2) Tap a size that you want

Jump to a Page

You can directly go to a page that you have specified.

When you are reading, tap the **Menu** icon  to display e-book settings.


- (1) Tap “Go to”.
- (2) Tap the page number input field to display the virtual keyboard.
- (3) Tap the numbers to input the page number.



- (4) Once you finish inputting the page number, tap “OK” to jump to the specified page.

Use Bookmarks


You can add, delete or load bookmarks on the page.

When you are reading, tap the **Menu** icon  to display e-book settings.

- (1) Tap “go to” then tap “Bookmarks” to add, delete or display bookmarks.

Show Outline of the e-book

You can view the outline of the e-book and then choose your desired chapter or section to read.

When you are reading, tap on the Menu icon  to display e-book settings.

- (1) Tap on “TOC” to display the outline of the e-book, and then tap the chapter that you want to read.

Download DRM protected e-books with the Adobe Digital Edition

Attention! Please note that you must install Adobe Digital Editions **BEFORE** you buy your first e-book online!

Once you have purchased ebooks online, you need to transfer them to your Tablet using the Adobe Digital Editions software which allows you to view and manage e-books protected by DRM license.

 
To transfer DRM-protected e-books,

1. Access the website <http://www.adobe.com/products/digitaleditions/>, and then install the Adobe Digital Edition software following the instructions online.




Note: To show the above installation window at the adobe website you must install or enable adobe flash player for the browser you are using first.

- For first time user, you will need to get a free adobe ID from adobe website. Click on the [get an Adobe ID online] link as illustrated:
- Enter your email address and complete the online form as per instructed.

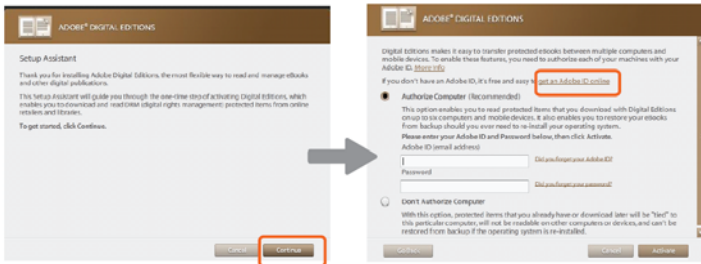

 2. Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account and authorize your computer.

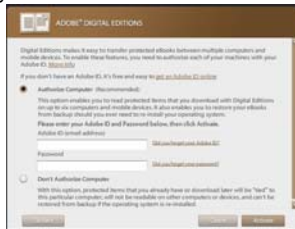

3. Activate your Tablet.

Connect your Tablet to computer with the USB cable and start up the Adobe Digital Editions. Click "Authorize Device" to authorize your Tablet.

4. Download DRM-protected PDF files to your computer.

Access the Internet and search for e-books, choose your favorite e-books and download them. If the e-book is protected by DRM, you should be prompted by DRM license information. Click “Open” to start downloading the DRM-protected e-book.

 
Note: You need to “OPEN” the e-Book you wish to download. DON’T use the “Save as”!



5. Click “Purchase”, and then you should see your downloaded e-book at the right panel of the Adobe Digital Editions user interface.



6. Connect your Tablet to the computer with the USB cable, and the Adobe Digital Editions should recognize your Tablet.

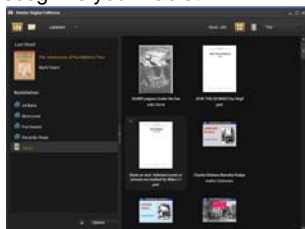

7. Click “Purchase” to see your downloaded e-book and then drag it to your Tablet.

Playing Music

In the **Home Screen**, tap the Music icon to enter the music player mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Music icon to enter the music mode.





Music Library

You should enter the music library once you start the music player. The Music Library shows your music files sorted by categories (Artist, Album, Genre, etc.) if your music files contain these song information tags. If some of your music files do not contain information tags, they will be classified as (Unknown) in the Music Library. When new music is copied to the device, the Music Library will be updated automatically.



 
- You can drag your finger up and down on the file list to scroll through the list.
- Tap a track to play a track.

To return to the Home Screen, tap  / .

Search for Tracks

You can search for tracks in the internal memory or memory card by inputting a few key words.

Playback Screen

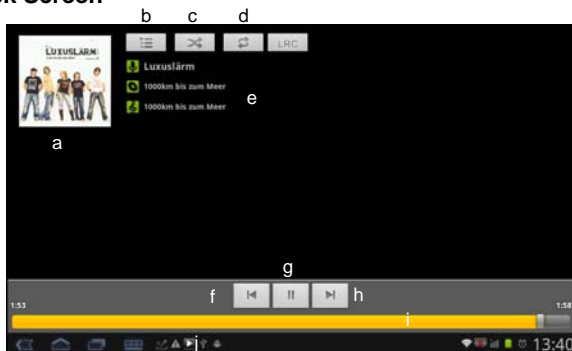

- CD Cover (If existing)
- Show current playlist.
- Random playback on / off.
- change replay mode
- ID3-Information's (Artist, Album etc.)
- Short press – Previous track
Long press – Fast Rewind
- Play/Pause
- Short press – Next track
Long press – Fast forward
- Progress bar
- Shows that the player app is running, if running in background.
 - To pause or resume the playback, tap on the Pause / Play icon.
 - To play the previous/next song, tap on / .
 - You can tap on the progression bar to go directly to a different location in the song. You can also drag the cursor in the progression bar to another location in the song.
 - Tapping continuously on the ID3 information tag will search for the information about the track from the Internet.

To go back to the music library, tap on .

To go back directly to the Home screen, tap on the Home icon or Return icon .

Video / Photo Playback

On the **Home screen** tap on the photo browser icon to launch the photo viewer. Alternatively, tap on the app icon to access all apps and tap on the photo icon to launch the music mode.


EN



Thumbnails


The first screen in photo mode shows all photos/videos and sub folders in the device or on memory card as thumbnails.



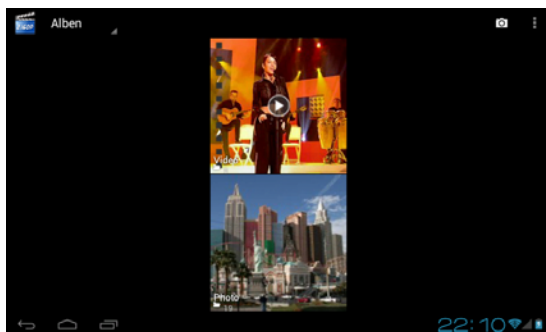 

 
Tap on a photo thumbnail to view the photo in full screen mode. Open the sub folder if the photo is stored in a sub folder to display the photo/video contents as thumbnails.

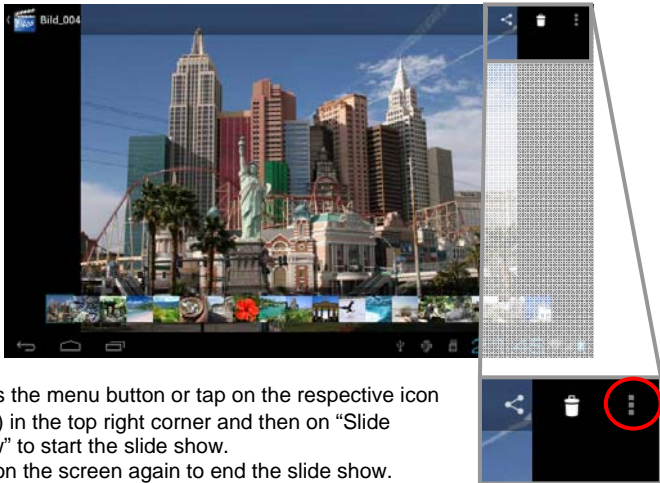

View Photo

While viewing photos tap on the screen to show the status bar at top and bottom.



- Press the menu button or tap on the respective icon (☰) in the top right corner and then on “Slide Show” to start the slide show.
- Tap on the screen again to end the slide show.
- Wipe with your finger to the left or right over the image to display the previous/next photo.
- To zoom in  or out  tap with two fingers on the display and pinch the image between thumb and pointer finger.
- Tap on  and then “Rotate Left” or “Rotate Right” to rotate the image 90° left or right.
- Tap on  again and then on “Details” to show image details.
- Tap on  and then on “Set Image As” to use the image as wallpaper or contact image.

Video Playback Screen



- Progress bar
- Decrease volume
- Increase volume
- Previous video
- Play/Pause
- Next video
- Video settings
- Return

- Tap on Pause / Play to pause or continue video playback.
- Tap on to display the menu items.
- Tap on the progress bar to skip to a position in the video. Alternatively, drag the cursor on the progress bar to a different position in the video.
- Tap on / to set the volume level.
- Tap on / to play the previous/next video.
- Tap on to end playback and to return to the video list.


Video Playback Settings

Tap on to display the video settings.

	Display subtitles, if available.
	Select sound track, if different sound tracks are available.
	Adjust aspect ratio.
	3D mode Caution! This function is not supported!
	Return – exit menu.

ES File Explorer

 On the **Home screen** tap on the app icon to access all apps and tap on the explorer icon to launch the ES Explorer.

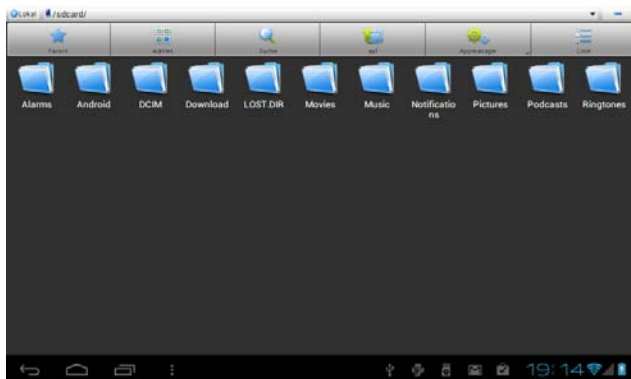



General

Standard path is the internal SD card. Tap on the ★ icon (Favorites) to toggle between connected storage media.

External storage devices are in folder "mnt":

SDCARD	Usable internal device memory.
EXTSD	Connected microSD memory card.
USBHOST1	USB storage media, which are connected via USB adaptor.

Navigate Files And Folders







- Wipe with your finger up and down to scroll through the file list.
- To open a file or folder, tap the file/folder.
- Tap on the  icon to navigate one directory level up.
- Tap on the Return or Home button anywhere in the app to return to the Home screen.
- Tap on the  icon to return to the Home screen.

Toolbar

Use the toolbar to navigate through your device's internal memory/memory card and delete or copy files.


Tap on this symbol to show or hide the toolbar.









	Toggle between connected media or return to Home screen.
	Select multiple files.
	Search by file type.
	Navigate one directory level up.
	Further elements such as task manager for simple management of current app. Please note: <i>Of the available apps only the task manager is pre-installed.</i>
	Toggle view.

 Menu Bar

 Tap on the menu bar to show additional functions.



	Access file management functions.
	Add files/folders.
	Further elements such as task manager for simple management of current app. Please note: <i>Of the available apps only the task manager is pre-installed.</i>
	Show storage locations as tabs.
	Different explorer settings such as View, Sort. Please note: <i>Not all functions are available on the device.</i>
	Additional information.

Copy/Move Files And Folders

- (1) In the file list, scroll up and down by wiping with your finger to select the file/folder to be copied or moved.
- (2) Hold your finger on the selected file/folder until a pop-up menu appears.
- (3) Select “Copy” or “Move” from the pop-up menu.
Navigate to the location where you wish to copy or move the file/folder to.
- (4) Open the field at the bottom and tap on the file to be inserted in the current folder.



Delete Files And Folders


- (1) In the file list, scroll up and down by wiping with your finger to select the file/folder to be deleted.
- (2) Hold your finger on the selected file/folder until a pop-up menu appears.
- (3) Select “Delete” from the pop-up menu, then select “Delete” to confirm or “Cancel” to cancel deleting.

Rename Files And Folders

- (1) In the file list, scroll up and down by wiping with your finger to select the file/folder to be renamed.
- (2) Hold your finger on the selected file/folder until a pop-up menu appears.
- (3) Select “Rename” from the pop-up menu.
- (4) Tap on the input field to display the virtual keyboard, then enter the letters from the virtual keyboard to rename the file/folder.
- (5) Tap “OK” to confirm the new name.

Select Multiple Files/Folders

You can select more than one file or folder together.

- (1) In the top toolbar, tap on the Multi icon .
- (2) Tap on the desired files/folders. The file/folder name turns red when selected (to deselect the file/folder, tap it again).
- (3) Once you finished your selection, you can delete, copy or move the selected files.

Manage Third-party Applications

Your Tablet provides support to many useful third-party applications. You can purchase the applications to add more functions to your device. They are available online at the Internet or directly on your product.

EN

Pre-installed Applications

The device has pre-installed applications when it was manufactured. You can see them by tapping **Application Tab**. They are video player, audio player, photo browser, calculator etc.

Install Applications

You can install applications manually following these steps:

- (1) Download the installation file to your computer. Make sure the file is in format of .apk which is supported by your Tablet system.
- (2) Connect your Tablet to computer with the USB cable.
- (3) Copy the installation file to your Tablet.
- (4) Disconnect your Tablet from the computer.
- (5) Turn on your Tablet and enter the file explorer mode with the Explorer.
- (6) Locate the installation file and open it.
- (7) Follow the on-screen instructions to install the application.
- (8) Once the application is installed successfully, you can find it in the application tab.

Uninstall Applications

- (1) Tap the Settings shortcut in the Home Screen to display all system settings.
- (2) Select "Applications".
- (3) Select "Manage Applications".
- (4) Tab on the application that you want to uninstall.
- (5) Tab on "Uninstall" to uninstall the application.

Note: *You cannot uninstall the pre-installed applications.*

Some of the applications developed for Android mobile might not run properly in the Tablet. Please consult the respective software developer for further information or support.

Caution! *Please note that the installation of third-party application occurs on your own risk! Any up normal behavior or damage that is caused by installing third-party applications will not be an integral part of the warranty.*

HDMI Output

- Connect the device using an appropriate cable to your TV.
- The display changes from the device to the screen.
- The touch screen remains black, but can be used for the operations.
For this reason, we recommend a USB mouse (not included) for the operations

Note: Please note that video and audio are only output via HDMI for video playback.

Simultaneous audio output via HDMI and the internal speakers and/or earphones jack is not possible.

 

If HDMI is connected, then videos are only displayed on the TV set. Controls can be displayed as usual by tapping on the tablet.

HDMI output is only intended when using the device in landscape mode.


Note: The device is equipped with a mini HDMI connector. You need an HDMI cable with a mini HDMI connector on one end and a standard HDMI connector on the other end (not supplied).

System Settings

On the Home screen tap on the “Settings” icon and select the category “**Wireless & Networks**”, “**Sound and Display**”, “**Date and Time**”, etc.

- Tap on the function to change the settings.
- Tap on the tick box on the right side of the parameter to enable this option.
- Wipe with your finger over the screen to display further settings outside the screen.
- After completing your settings tap on the  icon to return to the setting menu or tap on the  icon to return to the Home screen. Your changes are saved.

Wireless & Networks

Wi-Fi	Tap to enable/disable the Wi-Fi connection. Press the menu button or tap on the  icon in the top right corner and then on “Advanced” in the top right corner to manually set up and manage your Wi-Fi networks.
Data Consumption	Shows the data transmission for mobile connections.
More...	Here you find the advanced network settings such as for VPN or mobile use.

Device

Sound	Volume	Set the volume level for music and videos. You can also set the volume with the volume buttons on top of the device.
	Ring Tone & Notifications	Set the standard notification tones.
	System	Enable/disable touch screen button beeps and notification tones for lock/unlock.

Display	Brightness	Set screen brightness.
	Wallpaper	Select wallpaper.
	Auto Display Rotation	Automatic display rotation when rotating the device.
	Auto Off	Set auto off delay and screen lock. Press On/Off once to switch on again and tap on the screen once to unlock the screen.
	Font Size	Change the menu font size.
	Coordinate System G-Sensor	Adjust coordinate system for certain games.
Memory	This setting allows the verification of the memory capacity of the internal memory and SD card. You can also set media content of connected external USB devices or microSD cards to be searched.	
Battery	Capacity display of the rechargeable battery	
Apps	This screen allows Android™ apps management. Info display of apps installed on your device.	

User

Accounts & Sync	Sync setting for email accounts.
Location Services	This screen allows certain Android™ apps to determine their current location.
Security	Set security parameters and screen locks.
Language & Input Method	Set your language and region and configure text settings for faster and more accurate text input.
Backup & Reset	This setting allows system or data backup or recovery. Caution! <i>All previous settings are reset.</i>

System

Date & Time	Set date, time, time zone and time format.
Operating Aid	Set operating aid such as Auto Display Rotate or the touch screen response time.
Developer Options	Important functions for app developers such as USB debugging mode or user interface display functions.

About

Display information about your tablet system.

Troubleshooting

Reset the device

- If the **On/Off** button does not reset your device, use the “pinhole reset” button, located on the back of the device.
The device reboots. Settings and data are NOT lost.

Touch screen does not respond

- Ensure that the app provides full touch screen support.
- Do not tap too hard on the screen; this can cause malfunctions.

No sound from earphones

- Ensure that the volume setting is not too low and that the connection is ok. Ensure that the earphones are clean. Corrupted MP3 files can cause different noise or cannot be played. Ensure that the files are not damaged. Try different earphones. Ensure that the Wi-Fi function is enabled and that a wireless network is within range.

Characters are corrupted

- Ensure that the language is set properly.

No Wi-Fi connection

- Ensure that the Wi-Fi function is enabled and that a wireless network is within range.
- Enter the correct password. Observe special characters and case sensitivity. Characters must be entered accordingly.
- Follow the hints on the next page.

Solve Wi-Fi connection problems

1. Open Wi-Fi settings.
2. Select and remove Wi-Fi.
3. Tick "Display Password" and enter password.
4. Look out for status messages below the network name:

EN

Problem	Status messages (below network name in Wi-Fi settings)	Possible cause	Solution
Network not found	Network not found	<ul style="list-style-type: none">- SSID not visible- Wi-Fi too weak	<ul style="list-style-type: none">- Enable SSID in router configuration- Decrease distance to router- Firmware update or change channel
No Internet	<ul style="list-style-type: none">-> Connecting-> Not connected	<ul style="list-style-type: none">- MAC filter active	<ul style="list-style-type: none">- Deactivate filter in router configuration
No Internet	<ul style="list-style-type: none">-> Connecting-> Authentication...-> Not connected	<ul style="list-style-type: none">- Password wrong or wrong spelling	<ul style="list-style-type: none">- Check and re-enter password
No Internet	<ul style="list-style-type: none">-> Connecting-> Authentication...-> Retrieving IP address...-> Not connected	<ul style="list-style-type: none">- Router configuration faulty or- Wi-Fi too weak- DHCP server off	<ul style="list-style-type: none">- Delete list of connected devices on router- Decrease distance to router- Activate DHCP in router configuration

Troubleshooting

Reset this device

- If the **Power** button does not reset your device, use the “pinhole reset” button, located on the back the device.

Touch-screen Problems

- Check if the Application you are using has full touch-screen support.
- Don't press too hard on the screen. This might cause a wrong behavior.

No Wifi connection

- Take care that Wifi is enabled and a wireless network is in range.
- Be sure that you entered the correct password. Take care of special characters and capital letters. They need to be entered as is.

Without sound inside earphone

- Please confirm the volume is not in the status of Zero and the connection of earphone is ok. Please confirm the earphone is clean. The broken MP3 will produce noise with different grades even cannot play music. Please confirm the complete files. Try another pair of headphones. Take care that Wifi is enabled and a wireless network is in range.

The character on the display screen is in abnormal shape

- Please confirm the language that you selected is correct.

No USB connection is established to the PC

- Check cable/plug connection to the PC, Windows system configuration and USB driver. Restart PC, remove and reconnect the USB cable, reinstall drivers.

It is not possible to store anything at the inserted SD card

- Please confirm that the inserted SD card is not write protected.

It is not possible to download e-books from odysbook.de.

- Please disable any popup blocker.

Specifications

EN

Configurations	
CPU	1,2 GHz Processor (Cortex A8 Kernel)
DDR	1 GB DDRIII Ram
Built-in operating system	Android OS 4.0.x
Hardware	IBM PC or compatible PC, Note-book or Macintosh with USB port
Internal Memory	At least 4GB(2.5GB for file storage, 256MB for apps installation, 1.2GB for internal system use)
Memory Card	SD card: up to 32GB(SDHC)
System Requirements	
Operation System	Windows2000/XP/Vista/windows 7and MAC OS 10.4 or above
USB Interface	USB2.0 High speed
Features	
Output Port	3.5mm earphone port, built-in speakers
E-book Format	EPUB, PDF
Audio	MP3 (MPEG1/2/2.5 Audio Layer 1/2/3) ; WMA (Version 4,4.1,7,8,9) WAV (MS-ADPCM , IMA-ADPCM , PCM) APE (Version 3.95,3.97,3.98,3.99,normal and fast except high and extra high) FLAC (FLAC Audio) AAC (ADIF, ATDS Header AAC-LC and AAC-HE) (For license) OGG
Video Format	AVI (Xvid, Divx 4/5/6 except GMC&QPEL, Divx for License, Audio Codec: MP3, AC3) RM/RMVB (Real Video Codec 8/9/10 except G2, Audio Codec: Real Audio) FLV (Sonnati H.263, H.264 except O2 VP6) (For license) MKV (H.264, MPEG4, XVID, DIVX4/5/6) MOV (MPEG4, H.264, Audio Codec:MP3) 3GP/MP4(H.264/H.263/MPEG4/XVID/DIVX4/5/6)
Photo Format	JPEG, BMP, GIF(static), PNG
WI-FI	Available
Language	Multinational languages

Technical Parameter	
Read speed	8.7-9MB/S (MLC flash)
Write speed	4.5-4.8MB/S (MLC flash)
Audio Bit Rate	MP3: 8 ~ 320Kbps WMA: 8 ~ 320Kbps OGG: Q1- Q10
Video Resolution	AVI (Max.1280X720); RM/RMVB (Max.1280X720); FLV(Max.1280*720); MKV (Max. 1280X720); MOV (Max. 1280X720)
Video Bit rate	Max. 6Mbps (MPEG4, XVID, DIVX4/5/6); Max. 2.5Mbps (H.264, Real video 8/9/10); Max. 2Mbps (Sorenson H.263).
Photo Resolution	JPEG (Baseline) (Max.8000*8000), GIF(Static) (Max.1000*1000)
Network Connection Media	Wi-Fi (802.11 b/g/n)
Battery Charge Time	About 6 Hours
Battery Life	About 4 hours
Display	8" TFT LCD, Touchpad (capacitive touch pad), 1024 x 768 pixels.
SNR	65dB above
Frequency Response Range	20Hz—20KHz
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V ~ 50/60Hz, DC Output 5V/2A
Physical Parameters	
Storage Temp.	-20°C ~ +65°C
Ambient Temp.	0°C ~ +50°C
Operation Relative Humidity	20% ~ 90% (40°C)
Storage Relative Humidity	20% ~ 93% (40°C)

Warranty Conditions

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

1. AXDIA products are covered by a 24 month warranty. We will resolve damages or defects on AXDIA products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.

The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.

2. The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. AXDIA reserves the right to exchange the product for a replacement product of equal value if the product that is sent in cannot be repaired within a reasonable time or at reasonable cost. The product can also be exchanged for a different model of the same value. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.
3. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our products.
4. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
5. Any other or further claims are excluded, especially those for replacement due to damage caused outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, loss of earnings or interruption to business.

Asserting a warranty claim

1. To make use of the warranty service, you must contact the AXDIA Service Center by e-mail, fax or phone (see below for contact details). You can also use the service form on our website or on the back of the warranty conditions.
2. AXDIA Service Center will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and you will be asked to send the product to AXDIA.

IMPORTANT: AXDIA will only accept parcels that have an RMA number.

Please observe the following when sending the product:

1. Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the products (no cables, CD's, memory cards, manuals, etc.), unless the AXDIA Service Centre specifies otherwise.
2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. You must enclose a copy of the sales slip as proof of purchase.
4. Once AXDIA has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty

AXDIA can refuse any service claim made that is not covered by the warranty. If AXDIA agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs.

AXDIA will not accept any packages that have not first been approved by AXDIA by means of an RMA (Return Material Authorization).

